
E418

GSM Dual Band with GPRS Function and Color Screen Digital Mobile

Phone

Operation Manual

Contents

1 GENERAL INFORMATION..... 5

1.1 For Your Safety..... 5

1.2 Warnings and Attentions..... 6

1.3 General Attentions..... 6

1.4 Attentions of phone operation..... 6

<i>1.5</i>	<i>Sis using battery for attention</i>	<i>7</i>
<i>1.6</i>	<i>Sis sis sis use charger for attention</i>	<i>7</i>
<i>1.7</i>	<i>Cleaning and maintenance</i>	<i>8</i>
<i>1.8</i>	<i>General tips</i>	<i>8</i>

2BEFORE YOU USE..... 10

<i>2.1</i>	<i>Names and descriptions for each part.....</i>	<i>10</i>
<i>2.1.1</i>	<i>Technical information.....</i>	<i>10</i>
	<i>Keys Description.....</i>	<i>10</i>
<i>2.1.2</i>	<i>Side key description.....</i>	<i>11</i>
<i>2.1.3</i>	<i>Battery.....</i>	<i>11</i>
<i>2.1.4</i>	<i>Connect to network.....</i>	<i>12</i>
	<i>SIM Card.....</i>	<i>12</i>
	<i>Insert and remove SIM card.....</i>	<i>12</i>
	<i>Power on or off.....</i>	<i>13</i>
	<i>Unlock SIM card.....</i>	<i>13</i>
	<i>Unlock phone.....</i>	<i>13</i>
	<i>Connect to network.....</i>	<i>13</i>
<i>2.2</i>	<i>Basic operations.....</i>	<i>14</i>
<i>2.2.1</i>	<i>Make a call.....</i>	<i>14</i>
	<i>Make a national call.....</i>	<i>14</i>
	<i>Call to a extension number.....</i>	<i>15</i>
	<i>Make a international call</i>	<i>15</i>

<i>Make a call from call history</i>	15
<i>2.2.2 Make a emergency call</i>	15
<i>2.2.3 Phone</i>	16
<i>If the installation of the key answer to the arbitrary open, the key will answer the call, according to arbitrary, Otherwise, depending on dial-up access Ruanjian key or left unanswered, then left Ruanjian can call. If headphones have stuck, you can also use the headset button to answer the call. If you inconvenient button can be set up to automatically receive opened, and has stuck headphones, in the ring or vibration, phone access</i>	16
<i>2.2.4 Phone records</i>	16
<i>2.2.5 Call menu</i>	16
<i>Sis suspended</i>	16
<i>Sis end</i>	16
SIS SIS NEW PHONE	17
SIS CALL A NEW TELEPHONE LINKS	17
SIS SIS ADDRESS BOOK	17
SIS INTO THE ADDRESS BOOK TO VISIT THE STATE.	17
SIS SHORT MESSAGE	17
PREPARE AND SEND A MESSAGE	17
SIS RECORDING	17
RECORDING VOICE CALLS.	17
SIS SIS QUIET / RECOVERY	17

SIS NOT TO TRANSMIT (SEND) THE LOCAL VOICE. 17

Sis DTMF 17

Rolling search function choice 18

*Main menu or sub-menu at all levels, from top to bottom by rolling to the crucial function of the gland function
Ruanjian access option, Anyouruanjian withdraw from the current menu. 18*

Navigation Key Function 18

Shortcut 18

From the menu 18

The default menu structure functions as follows : 18

1 General Information

Introduction

Thank you for choosing E418 serie mobile phone. Through this manual, you can know how to use this phone and understand all of its fuctions and the simple operation.

E418 color screen mobile phone is designed for GSM/GPRS network. It gives you many utility functions including Chinese input, Address book, 64 chords ring tones, multimedia message, recorder, calendar, alarm, schedule, unit exchange, calculator, games, mp3 player, AVI video player besides voice communication. It also include the hot keys to make you more comfortable to enjoy music and videos when you working or playing. Besides these, it has individuating MMI too. The perfect function design can meet your different requirements.

E418 color screen mobile phone meets the GSM/GPRS standard and authenticated by the authoritative organizations around the world.

Our company keeps the rights to modify this manual without any notice.

1.1 For Your Safety

- If your phone was loss or stolen, please report it to your service provider or the shop which you buy the phone to let your phone and SIM card invalidate. Through this, you can avoid the pecuniary loss which caused by the illegal use of your phone.
- When you contract to your service provider or the shop which you buy the phone, the IMEI number which prints on the label stick on the back of your phone is needed. Please record it and keep it well for future.
- To avoid illegal use , please take some action, such as:
 - Set the PIN number of your SIM card and modify it before others know it.
 - When you leave your car, please do not place it on the place where can be seen by other easily.
 - Set Restrict calls

1.2 Warnings and Attentions

Please read this information carefully before using your mobile phone to make sure you use it correctly and safely.

1.3 General Attentions

- Use only the chargers which approved by our company. Other products would cause damage to the battery.
- Do not hit shock or throw it strongly to avoid causing problems or fires.
- Do not store it and its charger in microwave oven or other high-pressure device as it can causes accident like circuit damage and fire.
- Do not use it in the place where inflammable and explosible gas exist as it can causes phone problems and fires.
- Do not store it in hot, cold areas or dusty, dirty areas as the phone can be damaged.
- Keep it out of the reach of small children to avoid causing damage to children as children would use it as toy.
- Do not place it on the imbalance or not smooth table as it would fall and broken or cause damage.

1.4 Attentions of phone operation

- Turn off your phone wherever it is forbidden to use it like on aircraft and in hospital because your phone would cause interference or damage to the electronic equipments and medical devices. When use phone in these areas, please obey the associated regulations. This phone can power on and off automatically at a specific time, please check your alarm setting to make sure it don't power on on flight.
- Do not use it around high precision or low signal electronic devices as the RF signals would cause wrong operations or other problems. Especially pay attention to these devices list below: Hearing aids, pacemakers and other medical devices, fire detectors, automatic doors, and other automatic control equipments. Please contract to the device manufacturer or local sales to know the effects.
- Sis it is not to beat up on the LCD screen or other hard things, otherwise it would cause damage to the LCD panels and LCD liquid leakage. If LCD liquid into the eyes of the blind be dangerous. Then immediately wash eyes with water (never rubbed his eyes) and went to the hospital for treatment. Sis not demolished or converted the phone, it will be the mobile phone damage and leakage circuit fault. Sis in a very few cases, cell phone use in certain types of vehicles may have an adverse effect inside electronic equipment. Then please do not use mobile phones to avoid missing the security assurances. Sis not to using needles, pens and other sharp things button, otherwise it would have damaged cell phone or misoperation. Sis if the antenna were damaged, please do not use the phone, or may cause physical harm. Sis too close to avoid cell phone cards and other magnetic objects, the cell phone radiation

may remove floppy disks, the Provident Fund card. Storage credit card information. I should be grateful if you would remove of mental and other small metal objects on the mobile handset away from the place. Magnetic loudspeakers work that will attract those small metal objects, which may cause injury or damage to personal cell phone on. Please avoid mobile phone wet, the water or other liquid into the cell phone will cause cell phone overheating and leakage fault.

1.5 Please using battery for attention

- Please SIM installed and not the imposition of pressure, otherwise it would cause damage SIM
- Please not to end the first welding cell, which could lead to leakage, overheating, and the burst of fire.
- Please if the battery fluid into the eyes of the blind be dangerous, then please do not hand rubbed his eyes with copious irrigation, then immediately go to hospital for treatment.
- Please fire or heater in the side not to use or place cell phones and other high-temperature, which could lead to cell phone batteries overheating, burst and caught fire.
- Please not to make mobile phone wet, otherwise it will create mobile phone batteries overheating, smoke and corruption.
- Please please not to direct sunlight or high temperatures used mobile phone batteries near the vehicle. If it did it would cause a cell phone inside an overheated battery fluid leakage and may reduce performance and shorten life.
- Please please please not to charge more than 24 consecutive hours.

1.6 Please please use charger for attention

- Please use 220V AC. Lead to the use of other voltage leakage, fire and the damage to the cell phone and charger.
- Prohibit short-chargers, otherwise it would cause electric shock, and smoke damage to the charger.
- Please damage to the power line, please do not use the charger, which could lead to fire or electric shock.
- Please please requested to promptly clean power socket plot in the dust.
- Please, please do not put water on the charger next to the containers to

prevent spills caused water chargers overheating and leakage fault.

- Sis if exposed to water or other liquids charger to the socket Pulling down from power immediately to prevent overheating and fire. electric shock and charger failure.
- Please do not demolished or converted sis sis chargers, which could lead to personal injury, electrocution, fire damage and chargers.
- Sis high humidity in the bathroom, please do not use the charger, which could lead to electric shock, fire and damage to the charger.
- Please do not contact sis wet hands chargers, wiring and electrical outlets, which could lead to electric shock.
- Sis should not be a heavy load on the power supply wire-line or modified, otherwise it will create an electric shock and fire.
- Please sis sis in the cleaning and maintenance of the former power plugs will draw from the socket.
- Sis sis sis ? to seize charger plugs, wires widening power line damage caused electric shock and fire.

1.7 Cleaning and maintenance

- Sis and cell phone chargers no waterproofing, please do not use the bathroom in the high humidity, and should also avoid being rain-soaked.
- Sis dry with a soft clean cloth mobile phones, batteries and chargers.
- Sis not to use alcohol or benzene diluent solution cleans the cell phone.
- Sis sis will lead to dirt socket connections and power-down, I could not rechargeable, regular cleaning.

1.8 General tips

Cell phone :

- Sis please shoot 5 ° C to 40 ° C temperature and humidity environment of the phone.
- Sis if possible, away from regular phones, television, radios and office automation equipment in the local mobile phone users. equipment and the use

of mobile phones in order not to affect these results.

Sis batteries :

- I should be grateful if you would sis sis on the battery without direct sunshine, cool ventilated places.
- Sis cell phone battery life is limited. The frequent use of rechargeable batteries were gradually reduced in time. Void repeatedly charging that battery life done, the new models should be designated replacement batteries.

Charger :

- Sis, please do not charge at the following locations : the direct sunlight; The temperature was below 5 ° C or more than 40 ° C; humidity, vibration or more gray areas where (cause failures); television, radios and other electrical appliances near (the impact of images, sound effects).

2 Before you use

2.1 Names and descriptions for each part

2.1.1 Technical information

Phone

Model **E 418**

Dimension (Length×Width×Height) 91mm ×41mm ×8.3mm

Weight 50g (with 550mAh battery)

Li-Ion battery

Model **E 418**

Voltage 3.7 V

Charge limit voltage 4.2V

Capacity 550 mAh

Standby time about 100Hours ~160 Hours

 
Talk time about 2.5Hours ~5 Hours

Travel Charger

Model JT-A60450

Input AC 100-240V 50/60 HZ 120mA

Keys Description

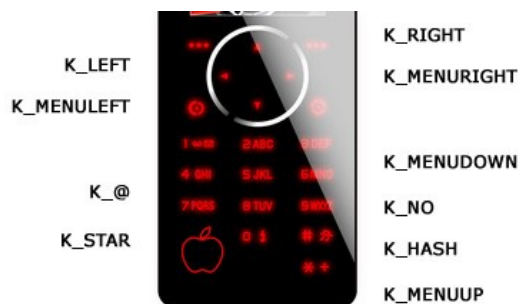

K_MENURIGHT: Right key

Move cursor to right when in edit mode.

K_MENULEFT: Left key

Move cursor to left when in edit mode.

K_MENUUP: Up key

Move cursor up when in edit mode.

K_MENUDOWN: Down key

Move cursor down when in edit mode.

K_@: Play key

Show messages when in idle mode.

K_RIGHT: Right soft key

Perform the function which shows in right corner of the screen bottom.

K_LEFT: Left soft key

Perform the function which shows in left corner of the screen bottom.

K_NO: Number key

Input number and characters, 2 to 9 keys can assigned as hot keys for quick dial.

K_STAR: * key

Input all special characters, Chinese characters, 'P' and '+'.
Input '#' or change input method when press it.

K_HASH: # Key

Input '#' or change input method when press it.

Attention: In this manual, press a key means press it and then free; long press a key means press and hold it two seconds or more time, then free.

2.1.2 Side key description

The side key of the phone is very usefull.

1. Power key : Long press this key to switch the phone on or off.

2.1.3 Battery

New batteries only have 50% capacity and you can use it after unpack. A new battery will require two or three times full charge/discharge cycles in order to achieve its optimum performance.
Charging the battery

- Plug the charger into the appropriate electrical outlet.
- Plug the charger into the charger port at the bottom of the phone.
- The charging indicator icon starts to flash. If charging with phone off, the display will show a picture to indicate the charging process is going. If your battery is too weak, maybe the charging indicator icon can only appear after some time.
- If the charging indicator icon stop flash and show fully, it meas the charging is complete. If charging with phone off, the display will show a picture to indicate the charging is complete. The charging procedure will last 3 or 4 hours normally and in this procedure it is normal that the battery, phone and charger will become hot.
- After charging is complete, disconnect the connector from the phone and unplug the charger from electrical outlet.

Attentions :

- Charge battery at the temperature between +5°C~ +40°C and the place should be with good ventilation. Use the charger provide by manufacturer. Other chargers may cause damage and will disobey the the warranty obligations.
- Charge battery in time when phone switches off automatically or shows the warning that battery low. The charging time varies along with the capability.
- The standby time and talk time are based on the ideal environment. It varies according to the network condition, working environment and how you use your phone.
- After charging is complete, please disconnect the connector from the phone and unplug the charger from electrical outlet
- If the charger still plugs in the charge slot and the phone has been fully charged, the phone will check the battery state automatically, and recharge the battery once it is not at full level after a long time (about 5~8 hours). But this will decrease the performance and life of your battery.

2.1.4 Connect to network

SIM Card

You have to insert a validate SIM card before you use it. SIM card is the key to let you log in digital GSM network.

SIM card contains all the information needed to setup the network connection, your call history, names and phone numbers you saved in address book and short messages you received. It can be removed from your phone and used in any GSM phone (New phone can read information from SIM card automatically).

Do not touch metal areas on the SIM card to avoid loss or damage the information inside. Keep SIM card away from electric fields and magnetic fields. You can not log in the GSM network with a damaged SIM card.


Wainig: Make sure the phone is switched off before you remove SIM card. It is forbidden to insert or remove SIM card when external power is connected to the phone, or the SIM card might be damaged.

Insert and remove SIM card

SIM card is stored in a card usually and you should take it out carefully before use it.

- Switch off your phone; remove battery and other external powers.
- Insert SIM card to the SIM card carrier as shown in the picture.
- When you need to remove SIM card, please switch off your phone first, remove battery and then remove SIM card.

Power on or off

To switch on the phone, please long press the power on/off key in the side of the phone or  ; To switch off the phone, please do it again.

If you switch on the phone without SIM card, the phone will ask you to insert a SIM card. After the SIM card is inserted, the phone will verify it.

Then the notice below will be shown in sequence:


Input PIN1 —— If you already set PIN in the SIM card

Input Password —— If you already set the phone unlock password, the initial password is “0000”

Searching —— The phone is searching for a network, it will be shown until an available network is found

Unlock SIM card

To avoid illegal usage, PIN1 is used in the SIM card to encrypt data. If you activate this function, you have to input PIN1 to unlock the SIM card every time when you switch on the phone. Then you can use it to make or receive calls. Also you can deactivate this function (Refer to “Security” in section 7.3), in this condition, the SIM card can not avoid illegal usage.

- Switch on phone by long pressing the power on/off key  .
- Input PIN1, press the right soft key to clear input, press left soft key to enter PIN1. For example, if the PIN1 is 1234, please input like this:

1 2 3 4

If the PIN1 is entered incorrectly three times, the SIM card will be barred by the network, and then the phone will ask for the PUK1, if you don't know the PUK1, do not try it, please ask your network provider for help. For more information, please refer to “Security” in section 7.3.

Attention: A standard PIN1 (4~8 digits) is set in your SIM card by your network provider, please change it right away. The details please refer to “Security” in section 7.3.

Unlock phone

To avoid illegal usage, this phone contains a password protection function. If you activate this function, you have to input the password to unlock it after PIN1 is entered (if PIN1 is set) every time when you switch on the phone, then you can use it to make and receive calls. You also can deactivate this function, in this condition, the phone can not avoid illegal usage.

- Input phone unlock password, press right soft key to clear input, press left soft key to enter password. For example, if the password is 1122, you have to input like this:

1 1 2 2

 
If you forget your phone unlock password, please contact with local authorized service center or your tradesman to unlock your phone.

Connect to network

After unlocking the SIM card successfully, the phone will search for an available network automatically (the display

shows “Searching”). Once a connection is setup, the display will show the network provider’s name. At this time, phone is in idle mode, you can make or receiver a call besides:

- Press right soft key to enter phone book
- Press left soft key to enter menu

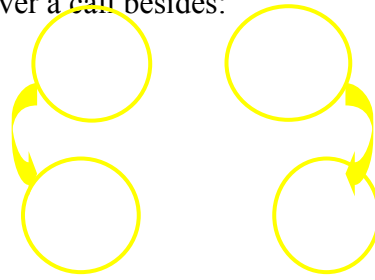

Attention: If “EMERGENCY” is shown on the screen, it means you are out of service, but you can make urgent calls according to the signal strength.

2.2 Basic operations

2.2.1 Make a call

When the display is showing the network provider’s name, you can make or receiver calls. The signal strength is shown on the top left corner of screen (five signal lines means the strength is in max level).

Moving in a small range can improve the voice quality as the obstructions can affect it greatly.



Make a national call

1. Use the number keys to input telephone number.
2. Press the send key to start call, press the right soft key to delete the last digital. The display will show calling animation when calling. After the call has been answered the display will show the communication status.

-
3. Press end key to end a call.

Area code → Phone number → press send key

Call to a extension number

Some extensions maybe can not call directly, you must connect to the telephone first and then dial the extension number. But if you insert “P” between telephone number and extension number, The phone will dial it automatically and connect to the extension. To input “P”, please long press the **key_star** (the display will show “P” at this time).

Area code → Telephone number → P → Extension number → Send key

Example for use “P” :

If you have a voice mail system and the telephone number is 8880000, mail box number is 6666, password is 8888. You can dial like this:

8880000 P 6666 P 8888

The first part of this number used to connect to the voice mail system.

After connection is setup, send 6666 to choose mail box.

Before send the password 8888, the second “P” will cause a delay of five seconds (The first “P” means waiting for connection setup, other “P” means a delay of five seconds).

Make a international call

To make a international call, long press key 0 until a “+” shown on the screen. This will permit you make a call in any country even you don’t know its country code (in China, it is 00).

Enter the country code and complete phone number after the prefixal character “+” is entered. Usually the country code of Germany is 49, Britain is 44 and Sweden is 46.

Please remove the leading “0” of the area code.

For example, if you call a hot line from other country, you should dial:

+86 21 114

+ Country code Complete phone number Send key

Make a call from call history

Every phone number you had called or answered is saved in the call history. All the numbers saved in the call history are classified according to dialed calls, received calls and missed calls. The phone also provides an option for you to view all the calls at a time. When the list is full, the old number will be replaced by the new one automatically. To view the list, please follow the steps below:

- To view dialed calls records, press send key
- All the numbers in the list can be dialed by just press the send key

Press OK to view the details of the number is the list, select save in the options can save it to phone book.

2.2.2 Make a emergency call

Only in GSM system coverage, you can make a emergency call. The display will show “EMERGENCY” if

your network provider does not provide service in this area to tell you that only emergency calls can accept by GSM system. You also can make emergency calls without SIM card if you in GSM system coverage.

2.2.3 Phone

If the installation of the key answer to the arbitrary open, the key will answer the call, according to arbitrary, Otherwise, depending on dial-up access Ruanjian key or left unanswered, then left Ruanjian can call. If headphones have stuck, you can also use the headset button to answer the call. If you inconvenient button can be set up to automatically receive opened, and has stuck headphones, in the ring or vibration, phone access.

2.2.4 Phone records

You can for your walkie-talkie phone records and a recent memory has been used since the time of all calls (see section 6.1 "conversation").

2.2.5 Call menu

In a state of the phone, the phone can enter by choice option. Menu option calls on the operation and function of the same operation. Call the menu can be seen only in the course of conversation, call waiting, call transfer, multi-functional needs of network support calls, please contact your network supplier.

Call option in the menu, you can operate as follows :

Sis suspended

(I) have been maintained or restored to maintain the current phone call.

Sis end

End the current call.

Sis sis new phone

Sis call a new telephone links.

Sis sis address book

Sis into the address book to visit the state.

Sis Short Message

Prepare and send a message.

Sis recording

Recording voice calls.

Sis sis quiet / Recovery

Sis not to transmit (send) the local voice.

Sis DTMF

DTMF Ruanjian opened or closed.

3 Function menu

3.1 The use of functional menu

Rolling search function choice

is designated state, according to the menu function into the main menu.

Main menu or sub-menu at all levels, from top to bottom by rolling to the crucial function of the gland function Ruanjian access option, Anyouruanjian withdraw from the current menu.

Navigation Key Function

For the convenience of users, in addition to rolling search navigation key, in the designated by the state, has left. Right Key have quick access to certain commonly used menu functions (Note : The fastest way to set up the required advance).

Shortcut


The cell phone provides four fastest way to open up the main menu. \ \ conventional choice walkie-talkie set the fastest way to enter the fast set. Setting fast as follows : the main function of choosing a fast interface, according to the left-center bond or enter Ruanjian editor After choosing a menu, identified by the center bond, which set a shortcut to completion.

From the menu

Function in the menu, under normal circumstances, you can Anyouruanjian to withdraw from certain menu items. Onhook return to the designated by the key interface.

3.2 Menu structure

The default menu structure functions as follows :


1  ? ? ? Phone Book

1-1 ? ? ? ? Quick Search

1-2 ? ? ? ? Search Entry



-
- 1-3 ? ? ? ? Add New Entry
 - 1-3-1 ? SIM ? To SIM
 - 1-3-2 ? ? ? To Phone
 - 1-4 ? ? ? ? Copy All
 - 1-4-1 ? SIM ? From SIM
 - 1-4-2 ? ? ? From Phone
 - 1-5 ? ? Delete
 - 1-5-1 ? SIM ? From SIM
 - 1-5-2 ? ? ? From Phone
 - 1-5-3 ? ? ? ? One By One
 - 1-6 ? ? ? ? Caller Group
 - 1-6-1 ? ? Friends
 - 1-6-2 ? ? Family
 - 1-6-3 ? ? ? ? VIP
 - 1-6-4 ? ? Business
 - 1-6-5 ? ? Others
 - 1-7 ? ? ? ? Extra Number
 - 1-7-1 ? ? ? ? Owner Number
 - 1-7-2 ? ? ? ? Service Dial Number
 - 1-7-3 ? ? ? ? SOS Number
 - 1-8 ? ? Settings
 - 1-8-1 ? ? ? ? Memory Status
 - 1-8-2 ? ? ? ? Preferred Storage
 - 1-8-3 ? ? ? ? Fields

-
- 1-8-4 ? ? ? ? My vCard
 - 1-9 ? ? ? ? ? Caller Picture
 - 1-10 ? ? ? ? Caller Ring Tone
 - 1-11 ? ? ? ? Caller Video
 - 2  ? ? ? Message
 - 2-1 ? ? ? SMS
 - 2-1-1 ? ? ? Inbox
 - 2-1-1-1 ? ? Reply
 - 2-1-1-2 ? ? Delete
 - 2-1-1-3 ? ? Edit
 - 2-1-1-4 ? ? Forward
 - 2-1-1-5 ? ? ? ? Delete All
 - 2-1-1-6 ? ? ? ? Use Number
 - 2-1-1-7 Save Objects
 - 2-1-2 ? ? ? Outbox
 - 2-1-2-1 ? ? Send
 - 2-1-2-1-1 ? ? Send
 - 2-1-2-1-2 ? ? ? ? Multi-sent
 - 2-1-2-1-3 ? ? ? ? Send groups
 - 2-1-2-2 ? ? Edit
 - 2-1-2-3 ? ? Delete
 - 2-1-2-4 ? ? ? ? Delete All
 - 2-1-2-5 ? ? ? ? Use Number
 - 2-1-3 ? ? ? Write Message
 - 2-1-4 ? ? ? ? Template
 - 2-1-5 ? ? ? ? Message Settings

-
- 2-1-5-1 ? ? ? ? Profile Setting
 - 2-1-5-2 ? ? ? ? Common Setting
 - 2-1-5-3 ? ? ? ? Memory Status
 - 2-1-5-4 ? ? ? ? Preferred Storage
 - 2-1-5-4-1SIM ? SIM
 - 2-1-5-4-2 ? ? Phone
 - 2-1-5-5 ? ? ? ? ? Pref. Bearer
 - 2-1-5-5-1GPRS ? ? Prefer GPRS
 - 2-1-5-5-2GSM ? ? Prefer GSM
 - 2-1-5-5-3 ? ? GPRS GPRS Only
 - 2-1-5-5-4 GSM Only
 - 2-2 ? ? MMS
 - 2-2-1 ? ? ? Write Message
 - 2-2-2 ? ? ? Inbox
 - 2-2-2-1 ? ? Check
 - 2-2-2-2 ? ? ? ? Information details
 - 2-2-2-3 ? ? Resumes
 - 2-2-2-4 ? ? ? ? ? ? Restore all
 - 2-2-2-5 ? ? Transponders
 - 2-2-2-6 ? ? Delete
 - 2-2-2-7 ? ? ? ? Delete All
 - 2-2-2-8 ? ? ? ? Use Number
 - 2-2-3 ? ? ? OutBox
 - 2-2-3-1 ? ? Check

2-2-3-2 ? ? ? ? Information details

2-2-3-3 ? ? ? ?

2-2-3-4 ? ? Delete

2-2-3-5 ? ? ? ? Delete All

2-2-3-6 ? ? ? ? Use Number

2-2-4 ? ? Drafts

2-2-4-1 ? ? Check

2-2-4-2 ? ? ? ? Information details

2-2-4-3 ? ? Transmission

2-2-4-4 ? ? ? ? News editor

2-2-4-5 ? ? Delete

2-2-4-6 ? ? ? ? Delete All

2-2-4-7 ? ? ? ? Use Number

2-2-5 ? ? ? ? Templates

2-2-6 ? ? Message Settings

2-3 ? ? ? ? Voice Mail Service

2-3-1 ? ? Edit

2-3-2 ? ? ? ? ? Connect to Voice

2-4 ? ? ? ? Broadcast Message

2-4-1 ? ? ? ? Receive Mode

2-4-2 ? ? ? ? Read Message

2-4-3 ? ? Language

2-4-4 ? ? ? ? Channel Setting

3



? ? ? ? Call History

3-1 ? ? ? ? Missed Calls

3-1-1 ? ? Delete

3-1-2 ? ? Save to Phone book

3-1-3 ? ? Dial

3-1-4 ? ? Edit

3-2 ? ? ? ? Dialed Calls

3-2-1 ? ? Delete

3-2-2 ? ? Save to Phone book

3-2-3 ? ? Dial

3-2-4 ? ? Edit

3-3 ? ? ? ? Received Calls

3-3-1 ? ? Delete

3-3-2 ? ? Save to Phone book

3-3-3 ? ? Dial

3-3-4 ? ? Edit

3-4 ? ? ? ? ? Delete Call Log

3-4-1 ? ? ? ? Missed Calls

3-4-2 ? ? ? ? Dialed Calls

3-4-3 ? ? ? ? Received Calls

3-4-4 ? ? ? ? Delete All

3-5 ? ? ? ? Call Time

3-5-1 ? ? ? ? ? Last Call Time

3-5-2 ? ? ? ? ? Total Sent

3-5-3 ? ? ? ? ? Total Received

3-5-4 ? ? ? ? ? Reset All Time

3-6 ? ? ? ? Call Cost

3-6-1 ? ? ? ? ? Last Call Cost

3-6-2 ? ? ? ? ? Total Cost

3-6-3 ? ? ? ? ? Reset Cost

3-6-4 ? ? ? ? Max Cost

3-6-5 ? ? ? ? ? Price Per unit

3-7 ? ? ? ? ? SMS Counter

3-7-1 ? ? Sent

3-7-2 ? ? Received

3-8 GPRS ? ? ? ? GPRS Counter


3-8-1 ? ? ? ? Last Sent

3-8-2 ? ? ? ? Last Received

3-8-3 ? ? ? ? All Sent

3-8-4 ? ? ? ? All Received

3-8-5 ? ? ? ? ? Reset Counter

4  ? ? Settings

4-1 ? ? ? ? Phone Setup

4-1-1 ? ? ? ? Time and Date

4-1-1-1 ? ? ? ? Set Home City

4-1-1-2 ? ? ? ? Set Time/Date

4-1-1-3 ? ? ? ? ? Set Format

4-1-2 ? ? ? ? ? Schdule Power On/Off

4-1-3 ? ? Language

4-1-4 ? ? ? ? ? Preferred Input Methods

4-1-5 ? ? ? ? ? ? Display Characteristic

4-1-5-1 ? ? Wall Paper

[? ?] **Option**

? ? System

? ? User Define

4-1-5-2 ? ? ? ? ? Screen Savers

[? ?] **Option**

? ? Installed

? ? Choice

4-1-5-3 ? ? ? ? ? Power On Display

4-1-5-4 ? ? ? ? ? Power Off Display

4-1-5-5 ? ? ? ? ? ? Show Date and Time

4-1-5-6 ? ? ? ? ? ?

4-1-6 ? ? ? Greeting Text

4-1-7 ? ? Speed Dial

4-1-8 ? ? ? ? ? Dedicated key

4-1-9 ? ? ? ? ? ? Auto update of date and time

4-2 ? ? ? ? ? Call Setup

4-2-1 ? ? ? ? ? Caller ID

4-2-2 ? ? ? ? ? Call Waiting

4-2-2-1 ? ? Activate

4-2-2-2 ? ? Deactivate

4-2-2-3 ? ? Query Status

4-2-3 ? ? ? ? Call Divert

4-2-3-1 ? ? ? ? ? ? ? ? Divert All Voice Calls

[? ?]Option

? ? Activate

? ? Deactivate

? ? ? ? Query Status

4-2-3-2 ? ? ? ? ? ? ? ? Divert If Unreachable

4-2-3-3 ? ? ? ? ? ? ? ? Divert If No Answer

4-2-3-4 ? ? ? ? ? ? ? ? Divert If Busy

4-2-3-5 ? ? ? ? ? ? ? ? Divert All Data Calls

4-2-3-6 ? ? ? ? ? ? ? ? Cancele All Divert

4-2-4 ? ? ? ? Call Barring

4-2-5 ? ? ? ? Line Switching

4-2-6 ? ? ? ? ? ? Call Time Reminder

4-2-7 ? ? ? ? ? ? Call Time Display

4-2-8 ? ? ? ? Auto Redial

4-2-9 ? ? ? ? Closed User Group

4-2-10 IP ? ? IP Number


4-3 ? ? ? ? Network Setup

4-3-1 ? ? ? ? Network Selection

4-3-1-1 ? ? Automatic

-
- 4-3-1-2 ? ? Manual
 - 4-3-2 ? ? ? ? Preferred Networks
 - 4-3-3 GPRS ? ? GPRS Connection
 - 4-4 ? ? ? ? Security Setup
 - 4-4-1 SIM ? SIM Lock
 - 4-4-2 ? ? ? Phone Lock
 - 4-4-3 ? ? ? Auto Keypad Lock
 - 4-4-4 ? ? ? ? Fixed Dial
 - 4-4-5 ? ? ? ? Barred Dial
 - 4-4-6 ? ? ? ? Change Password
 - 4-4-6-1 ? ? PIN ? PIN
 - 4-4-6-2 ? ? PIN2 ? PIN2
 - 4-4-6-3 Phone Lock Password
 - 4-4 ? ? ? ? ? ? Restore Factory Settings
 - 4-5 ? ? Sound Effect
 - 4-5-1 ? ? ? Equalizer
 - 4-5-1-1 ? ? ? Normal
 - 4-5-1-2 ? ? ? Bass
 - 4-5-1-3 ? ? Dance
 - 4-5-1-4 ? ? ? Classical
 - 4-5-1-5 ? ? Treble
 - 4-5-1-6 ? ? Party
 - 4-5-1-7 ? ? ? ? Pop

4-5-1-8 ? ? ? Rock

5  ? ? ? Organizer

5-1 ? ? Fun & Games

5-1-1 ? ? Games

5-1-1-1 ? ? ? Copter

5-1-2 ? ? Stopwatch

5-1-2-1 ? ? ? ? Split Timing

5-1-2-2 ? ? ? ? Lap Timing

5-1-2-3 ? ? ? ? View Record

5-1-3 ? ? ? ? Game Setting

5-1-3-1 ? ? ? ? BGM

5-1-3-2 ? ? ? ? Sound Effect

5-1-3-3 ? ? ? ? Game Vibration

5-2 ? ? Calendar

5-3 ? ? ? To Do List


5-4 ? ? Alarm

5-5 ? ? ? ? World Clock

5-6 ? ? ? ? Extra

5-6-1 ? ? ? Calculator

5-6-2 ? ? ? ? Health

6  ? ? ? Multimedia

6-1 ? ? ? ? ? Audio Player

6-1-1 ? ? Play

6-1-2 ? ? ? ? Detail

6-1-3 ? ? ? ? ? Add To Rings

6-1-4 ? ? ? ? ? Refresh List

6-1-5 ? ? Settings

6-2 ? ? Sound Recorder

6-3 ? ? ? ? File Manager

6-6-1 Images

6-6-2 Audio

6-6-3 My Music

6-6-4 Received

[? ?]

 
? ? Open

? ? ? ? ? Create Folder

? ? Rename

? ? Delete

? ? Sort



7 ? ? ? ? User Profiles

7-1 ? ? ? ? General

7-1-1 ? ? Activate

7-1-2 ? ? ? ? Customize

7-1-2-1 ? ? ? ? Tone Setup

7-1-2-1-1 ? ? Incoming Call

7-1-2-1-2 ? ? Alarm

7-1-2-1-3 ? ? Power On

7-1-2-1-4 ? ? Power Off

7-1-2-1-5 ? ? Message Tone

7-1-2-1-6 ? ? ? Keypad Tone

7-1-2-2 ? ? Volume

7-1-2-2-1 ? ? ? Ring Tone

7-1-2-2-2 ? ? ? Key Tone

7-1-2-3 ? ? ? ? Alert Type

7-1-2-3-1 ? ? Ring

7-1-2-3-2 ? ? Vibration Only

7-1-2-3-3 ? ? ? ? ? Vibra and Ring

7-1-2-4 ? ? ? ? Ring Type

7-1-2-4-1 ? ? Single

7-1-2-4-2 ? ? Ascending

7-1-2-4-3 ? ? Repeat

7-1-2-5 ? ? ? Extra Tone

7-1-2-5-1 ? ? ? Waining

7-1-2-5-2 ? ? Error

7-1-2-5-3 ? ? ? ? ? Camp on

7-1-2-5-4 ? ? ? ? Connect

7-1-2-6 ? ? ? ? Answer Mode

7-1-2-6-1 ? ? ? Any Key

7-1-2-7 LCD ? ? LCD Backlight

7-1-2-7-1 5 ? 5 Sec

7-1-2-7-2 15 ? 15 Sec

7-1-2-7-3 30 ? 30 Sec

7-1-2-7-4 45 ? 45 Sec

7-2 ? ? ? ? Meeting

7-2-1 ? ? Activate

7-2-2 ? ? ? ? Customize

7-2-2-1 ? ? ? ? Tone Setup

7-2-2-2 ? ? Volume

7-2-2-3 ? ? ? ? Alert Type

7-2-2-4 ? ? ? ? Ring Type

7-2-2-5 ? ? ? ? ? ? Extra Tone

7-2-2-6 LCD ? ? LCD Backlight

7-3 Outdoor

7-3-1 Activate

7-3-2 Customize

7-3-2-1 Tone Setup

7-3-2-2 Volume

7-3-2-3 Alert Type

7-3-2-4 Ring Type

7-3-2-5 Extra Tone

7-3-2-6 LCD Backlight

7-4 Indoor

7-4-1 Sart up

7-4-2 Personal setting

7-4-2-1Tone Setup

7-4-2-2 Volume

7-4-2-3 Alert Type

7-4-2-4 Ring Type

7-4-2-5 Extra Tone

7-4-2-6 LCD Backlight

7-5 Handset

7-5-1 Activite

7-5-2 Customize

7-5-2-1Tone setup

7-5-2-2 Volume

- 7-5-2-3 Alert Type
- 7-5-2-4 Ring Type
- 7-5-2-5 Extra Tone
- 7-5-2-6 LCD Backlight

8  ? ? Service

8-1 WAP

8-1-1 ? ? Homepage

8-1-2 ? ? Bookmarks

8-1-3 ? ? ? ? Recent Pages

8-1-4 ? ? ? ? ? Enter Address

8-1-5 ? ? ? ? ? Service Inbox

8-1-6 ? ? Settings

8-1-6-1 ? ? ? ? ? Edit Profile

[? ?]Option

? ? ? ? ? Activate Profile

? ? ? ? ? Edit Profile

8-1-6-2 ? ? ? ? Browser Option

8-1-6-3 ? ? ? ? ? ? Service Message Settings

8-1-6-4 ? ? ? ? Clear Cache

8-1-6-5 ? ? ? ? ? ? Clear Cookies

8-1-6-6 ? ? ? ? Trusted Certificates

8-2 ? ? ? ? Data Account

8-2-1 GSM ? ? GSM Data

8-2-2 GPRS

Some of the menu : only in certain specific circumstances under which they arise.

3.2.1 Telephone Directory

You can use the address book of names of some important memory function, cell phone, home telephone, phone cards and other information. Address book option from the main menu interface or designated under Anyouruanjian, will be able to directly enter the address book function.

You can see in the address book to find quick, name search, add numbers, all copying, deletion, caller groups, the other numbers, setup, Photo caller, the caller rings, the caller animation option.

Fast search : an option to enter an address book browsing interface, which provides a search input box below the window. You can input the information corresponding to the selected record.

Key switching input methods can be adopted by the Council to identify ways to achieve the handoff.

New numbers : Adding to the address book of a new telephone records, or may choose storage method for mobile phone SIM cards. In a slight difference between the two storage format.

Reproduction : SIM cards for mobile phones or copies of all records can choose from a cell phone to the SIM. For instance, or from a cell phone.

Delete : implementation of this option to delete records of telephone operators. SIM SIM delete all options from the telephone records; choice of cell phone, cell phone, address book to delete all of the telephone records; Telephone records of the article can choose to delete article delete operation.

3.2.2 Short Message

Choose "Short Message Service" sub-menu to enter the menu.

If your network support, and you have to apply the supplier network business through short message service center You can arbitrarily transceivers, and multi-media news and information in English.

3.2.2.1 Drop Box

Upon receiving a short message, cell phones will be issued vibration (vibration if open) or suggest Voice (voice suggested that if the function has already started). screen animation is suggested. If you do not want to read immediately, the designated interface may also revealed new information suggest that this information and automatically stored in the SIM Card.

SIM can keep the number of SMS (including the preservation of local and receive SMS) from the SIM capacity decisions.

To read much information can be entered : sub-menu boxes can be read by reading the new Short Message Service (Yediot Aharanot, the icon is).

After receiving new information into the next level menu

Reply : resumes current information. When : to delete the message. Editor : When the editors of the information. : When transmitting of information transmitted. To delete all of the following : delete all boxes of information. Use numbers as a number of other authors : get used. Etc

3.2.2.2 Copy box

In the case of Short Message box table, the details of which can be set to read the news. At this time could send option for the following operations : : send current information. Sent a number of multi-use : the addressee. Keep sending groups : telephone directories group has sent. Editor : The editorial did not send current information. Information : to delete the provision. To delete all the information box : Delete all the

pieces. Depositors use numbers : telephone directories group has sent.

Writing news

Common Phrases

Some commonly used phrase can be used into the sentence, in order to avoid the duplication of messages sent each input. After writing an option to edit or delete.

SMS installed

Message sent : the establishment mode types. Reservations : SMS erected erected. Inquiries : check use of memory capacity. SMS storage location for the storage location set : "S I M " or "mobile phone

Information transmission installed

SMS set up to the means of transmission : "GPRS priority" or "GSM priority" or "only GPRS"

3.2..3 MMS

Use MMS functions.

3.2.3.1Written information

A new multimedia information. You need to fill in the addressee home, copies of copies of the classified documents, keynote and editorial content

3.2.3.2Drop Box

Access multimedia information received. (Specific information with the short text boxes). This menu has the following functions :

Address : Check the current MMS

Information details : M Check the details of the current MMS

Reply : MMS sent to the sender of the current MMS

Reply to all : At present, the sender and all recipients to send MMS MMS

Transmitted : Transmitted to the other person

Delete : Delete the current MMS

All delete : Delete the contents of all boxes

Use numbers : Other numbers, as the author put to use.

3.2.3.3Copy box

Sending multimedia information storage unsuccessful. (Specific information with a copy of the short text box)

This menu has the following specific functions :

Address : Check the current MMS

Information details : M Check the details of the current MMS

Reply : MMS sent to the sender of the current MMS

Reply to all : At present, the sender and all recipients to send MMS MMS

Transmitted : Transmitted to the other person

Delete : Delete the current MMS

All delete : Delete the contents of all boxes

Use numbers : Other numbers, as the author put to use.

3.2.3.4DRAFT

Even if the editors did not send a valuable message here. Information will be sent has been squeezed message.

Address : Check the current MMS

Information details : M Check the details of the current MMS

Reply : MMS sent to the sender of the current MMS

Reply to all : At present, the sender and all recipients to send MMS MMS

Transmitted : Transmitted to the other person
Delete : Delete the current M M S
All delete : Delete the contents of all boxes
Use numbers : Other numbers, as the author put to use.

3.2.4 Voice Box

Received the information stored in your voice network to listen to the information you need to dial voice mail numbers. This menu has the following functions :

Editor : You can add / editorial voice mailbox number, so that the use of voice mail function will be more efficient.

Voice : Call your link to the provision of voice-mail number, the voice.

Note : Regional radio operator and voice mail services are provided, please contact your operator.

3.2.5 Cell B Broadcast

Regional broadcasting : Access customized menu Cell Broadcast news you read.

Subscription : Set up a regional broadcasting channel.

Acceptance : Opening reception mode choose to enter, refused to accept the closure of Cell Broadcast news.

Language : Area radio receivers installed language.

4 Call management

4.1 Did not answer the phone

Has not received any calls can check list.

Detailed information in the interface, according to the option selected telephone records are currently operational.

Delete: Delete records.

Preserved : S I M cards or cell phone numbers to preserve this.

Dial-up : Dial the telephone number.

Editor : Tel surrender them into editing the address book.

4.2 Set aside calls

Has not received any calls can check list.

Detailed information in the interface, according to the option selected telephone records are currently operational.

Delete: Delete records.

Preserved : S I M cards or cell phone numbers to preserve this.

Dial-up : Dial the telephone number.

Editor : Tel surrender them into editing the address book.

4.3 Have to answer the phone

Has not received any calls can check list.

Detailed information in the interface, according to the option selected telephone records are currently operational.

Delete: Delete records.

Preserved : S I M cards or cell phone numbers to preserve this.

Dial-up : Dial the telephone number.

Editor : Tel surrender them into editing the address book.

4 . 4 Delete call records

Has not received any calls can check list.

Detailed information in the interface, according to the option selected telephone records are currently operational.

Delete: Delete records.

Preserved : SIM cards or cell phone numbers to preserve this.

Dial-up : Dial the telephone number.

Editor : Tel surrender them into editing the address book.

4 . 5 Airtime

Last call time : Statistics last airtime.

Have telephone Total : Total time allocated telephone.

Received a telephone Total : Total time has to answer the phone.

All time zero : From the statistical data.

4.6 Billing phone : Data can be found below.

Last call charge.

All calls cost.

The call charge zero.

Cost restrictions : Phone installed ceiling.

Prices and rates : Set the call cost per unit time.

4.7 SMS counter

Sent : Statistics of the number of messages sent.

Acceptance : Statistics of the number of messages sent.

4.8 GPRS counter

Last transmission : Statistics last transmission of data flow.

The last to receive : Statistics last transmission of data flow.

All transmissions : Statistics last transmission of data flow.

Accept all : Statistics last transmission of data flow.

Counter RZ : Reset all statistics and start counting.

5 Installed

5.1 Telephone installed

Set up mobile "time period", "the establishment of the Town" and "set time" time "format set up"

Set up "a machine timer switch"

Set up mobile phone use "language"

Set up mobile phone "set input"

Set up mobile phone "waiting menu shows that the" install "wallpapers"

5.2 Phone installed

Installation of "aircraft" numbers indicate. installed whether to open up "call waiting" and "Call Transfer" and "unable to transfer calls when connected" and "no response when transfer calls," "transfer calls at busy," "transfer all data calls" "the transfer of all calls to abolish"

5.3 Network Configuration

Set up mobile phone networks

5.4 Set up safety

SIM lock :

You can set up under the menu option for the safety of mobile phones, or cell phone SIM cards to prevent unauthorized use.

PIN control

PIN SIM you can prevent illegal use.

If the current PIN closed, opened PIN protection can choose to open next PIN switched to ask you; If the current PIN has opened, closed choose to close PIN protection PIN opted for a change. PIN PIN2 code can install a new change, according to the old PIN suggested were imported, PIN new PIN new and repeat.

Attention : If three successive PIN wrong, SIM will be Deadlock and when that happens, you need to unlocking code SIM PUK. PIN SIM and PUK codes together may provide it to you and, if not, please contact your network supplier. The default is 1,234 PIN general, to set up as soon as possible to change the password.

Telephone locks :

Cell phone was locked to prevent non-authorized use your cell phone.

Control options can be locked open cell phones, cell phone password-protected, ask your cell phone will be switched on next password; closed closed cell phone can be password-protected.

Attention :Telephone 1122 is the default password lock, you should be changed as soon as possible for their own passwords.

Fixed dial :

If you support the SIM can only restrict dial selected numbers. When this function opened, Dial-up table can be fixed only dial a telephone number or a few figures to show the beginning of the telephone number.

On the keyboard locks : Software acquiescence in 10 seconds to close the keyboard lock, or set up for 10 seconds, 30 seconds, 60 seconds, 5 minutes; Keyboard reaction lifting operation, the left switch planes Key row twice.

5.5 Resumption of the factory installed

The manufacturer set a password to resume duty.

5.6 Sound effect

Equalizer : Adjusting the "balance" in a state of "no change", "Super Bass" and "Dance" and "classical music" and "Treble", "dinner" and "pop music" or "rock" types.

6 Toolbox

6.1 Entertainment

Include "game", "code" "Calendar" and "alarm clock" and "Universal Time" and "Additional functions," and so on

7Multimedia

7.1 Audio music machine

Which can be based on the use of "broadcast" and "detailed information" and "Placing rings," and "broadcast updated list" and "set" function.

Broadcast : Current broadcast music.

Detailed information : Music current information.

Placing rings Secretary : Look at the current ranges, as a "message" and "calls" buzz.

Broadcast updated list : Re-reading memory song information.

MP3 Player state to adjust the volume : Increase by 2 figure , bond reduced by 8 figure

The only support machine MP4 AV I video broadcast format (audio-video interactive).

MP4 broadcast state to adjust the volume : The maximum volume has tacitly agreed to set up mobile phones, according to the "?" key to enter a quiet state, not for the sound and orderly movements.

7.2 Recording

Use "recording" function

7.3 File Management

Memory check :

Images : Photo Information

Audio : Audio File Information

My Music : Table I shows

Received : Recorded information.

The corresponding menu can be used as "opening" of a "new folder", "rename", "delete", "sequencing" of the document or folder operation.

8 Situations

Users can choose different scene modes, but also a mode of self-definition of several scenes. The cell phone provides a general pattern : seven scene modes, meeting formats, indoor model, outdoor model, headphone model.

8.1 Situations

In general pattern can be created "rings installed" and "calls" and "alarm" and "switched on" and "turned off" and "news" and "buttons" of "noise" and "Neither method" and "buzz type", "indicated Music," "responsive mode" and "LCD backlight" option.

Note: Volume Setting: 1). Click " User Profiles"---"General"---"Customize"---Tone setup "----"incoming call" or "Alarm" ----adjust volume by up or down button"

8.2 Meeting mode

In the model can be created "buzz set up" and "calls" and "alarm" and "switched on" and "turned off" and "news" and "buttons" of "noise" and "Neither method" and "buzz type", "indicated Music," "responsive mode" and "LCD backlight" option.

8.3 outdoor mode

Outdoor model can be created "rings installed" and "calls" and "alarm" and "switched on" and "turned off" and "news" and "buttons" of "noise" and "Neither method" and "buzz type", "indicated Music," "responsive mode" and "LCD backlight" option.

8.4 Indoor Model

Indoor model can be created "rings installed" and "calls" and "alarm" and "switched on" and "turned off" and "news" and "buttons" of "noise" and "Neither method" and "buzz type", "indicated Music," "responsive mode" and "LCD backlight" option.

8.5 Headphone model

In headphone models can be created "buzz set up" and "calls" and "alarm" and "switched on" and "turned off" and "news" and "buttons" of "noise" and "Neither method" and "buzz type", "indicated Music," "responsive mode" and "LCD backlight" option.

9 Services

In the "service" option can set the parameters needed for mobile Internet access. (SIM and the operator)

9.1 WAP

Support your cell phone based on wireless application protocol (WAP) services. You can visit your support network operator services. The menu may give you access to news services, such as weather and flight information.

Attention : GPRS network support service needs, we must also opening GPRS network coverage in

the region, can use GPRS services.

Front page : Landing home page. Home page is set up as you start connecting the creation of WAP websites. If you have not installed and manufacturers will use predetermined sites.

Bookmarks : Showing all bookmarks. Bookmarks can choose a direct link to the web site.

Historical records : The record before you have visited Internet site.

The address : You can input an arbitrary choice of the WAP, or other Internet sites.

Service boxes : The news sent, storage service providers.

Installed: For online access to the set.

1. Started setting up the current network set up : the choice group.

2. Editors current network installed : The parameters of the Web site. Including PROFILE NAME, home page, IP address, IP ports, user name, password and account data communications to the setup.

9.2 account information

GSM : GSM data transmission data online

GPRS : GPRS data on the use of the Internet

10Note input

10.1 English and Digital Input

English keyboard and digital input specific definition :

Key members	Corresponding character or function	
	Upper case	Lower case
1	Space, @, , ? , Z, ? , ? , ? , ? , ? , ? , 1	
2	A, B, C, E, Д, Ж, А, З, 2	a, b, c, г, д, ж, а, з, 2
3	D, E, F, И, Й, 3	d, e, f, и, й, 3
4	G, H, I, M, 4,	g, h, i, м, 4
5	J, K, L, 5	j, k, l, 5
6	M, N, O, X, Ц, Ш, Т, 6	m, n, o, x, ц, ш, т, 6
7	P, Q, R, S, Я, 7	p, q, r, s, Я, 7
8	T, U, V, Ъ, Щ, 8	t, u, v, ъ, щ, 8
9	W, X, Y, Z, 9	w, x, y, z, 9
0	+, &, @, /, , %, \$, J, , , , , 0	
*	*?;!:?... „ ??? ?@/-;+&%*=??J \$???~^i #?	

English importation of the general method of operation :

Each button has been used for the importation of characters. Fast characters repeat button until you need arise. Such as cursor movement, importation of a character.

Switching with key input method.

When you need a box is a crucial state in capital letters or lowercase letters, according to a 0 bond.

Ruanjian removed with the right input error.

11 Computers and archives storage

11.1 Computers and U disk

When the cell phone connection to the computer through USB computer link, I should be grateful if you would cell phone turned off. 3-5 seconds in the cell phone screen will show "USB" time for the use of U-disk storage. Please refer to the specific use of U disk use. „My music“folder is for MP3 song, „Video“Folder is for Video MP4 Video.

11.2 File Management

When you need to make adjustments in the paper files, cell phone, please enter the music player (Aideo) Animation Player (Video), photo memory (Images), for the corresponding documentation into. derived work.

11.3 Memory

The physical memory to use, the cell phone has been fixed intimate memory capacity of 128MB.

THE END